



Ananda ADST software update

Stap 1

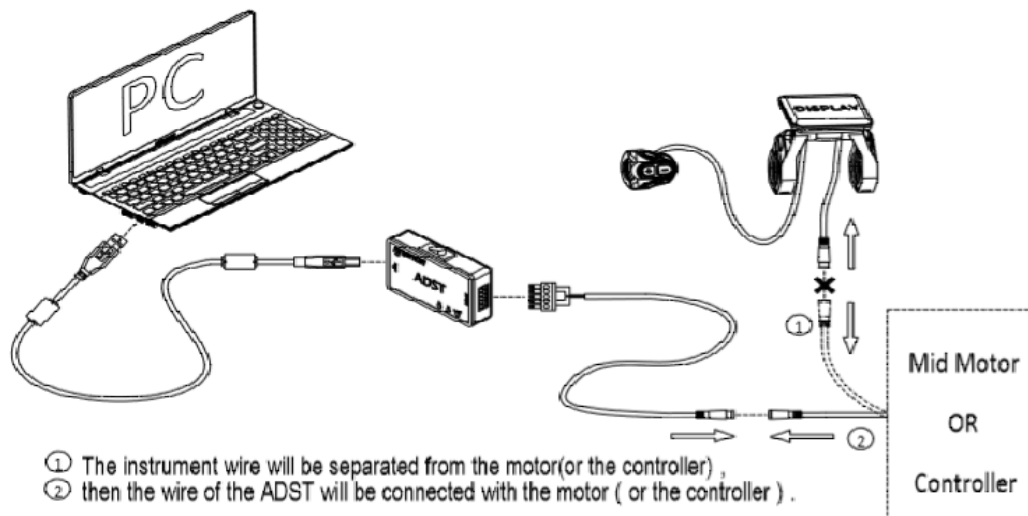


Ontkoppel het display van de motor. Koppel de ADST-tool aan controller (motor) zoals hierboven staat afgebeeld.

Stap 2

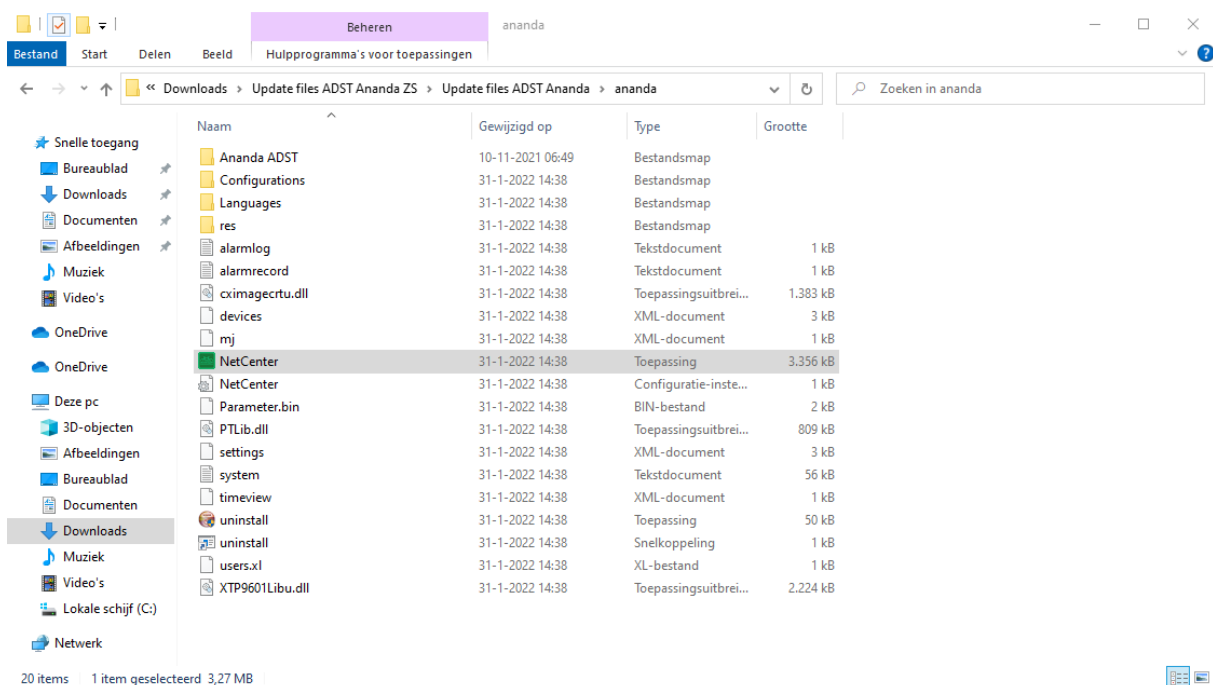


Open Net Center op de PC.

Stap 3

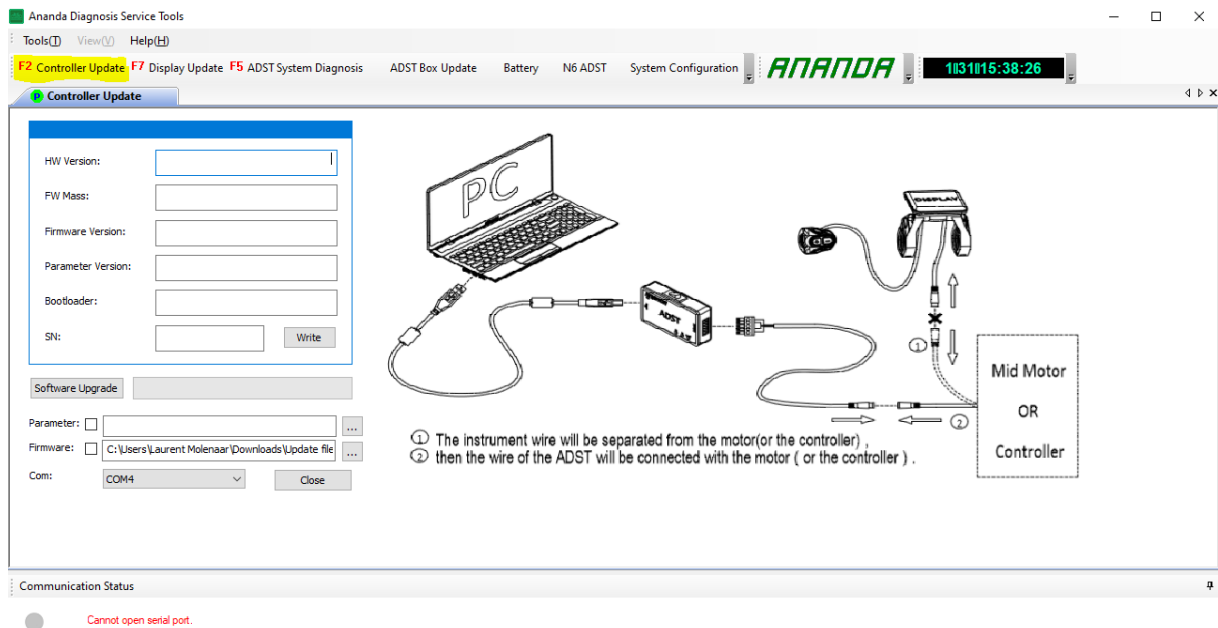

Druk op F2 of klik op Controller update zodat het bovenstaande scherm te zien is.

Stap 4

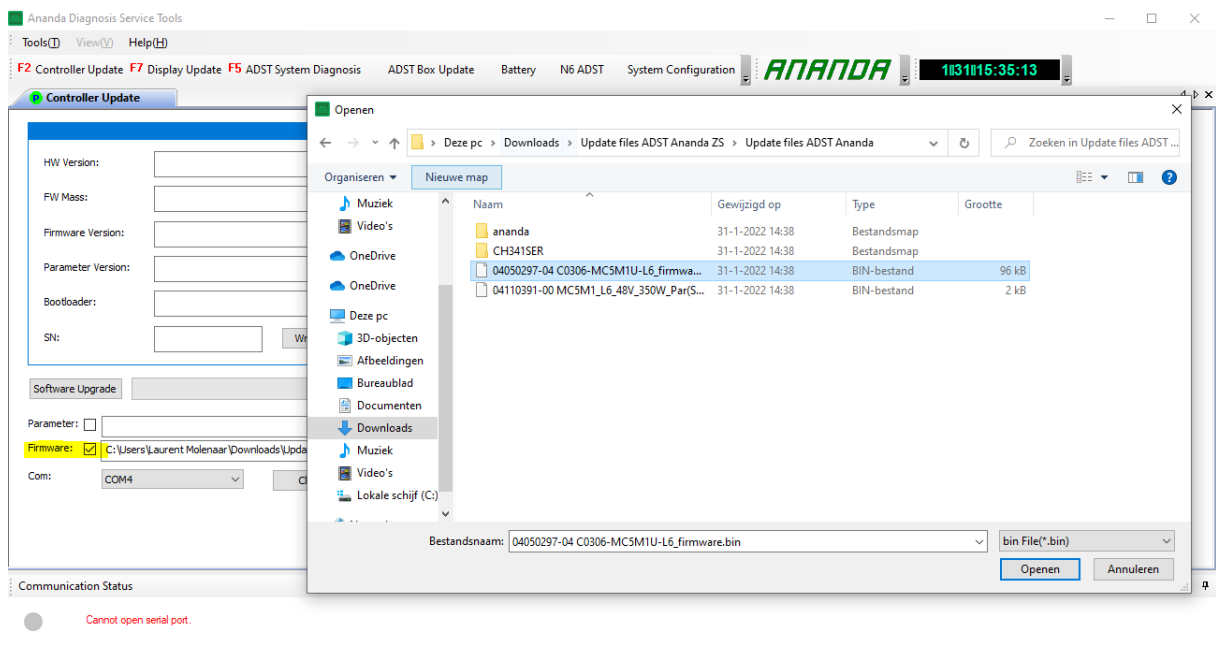

Vink het vakje Firmware aan en selecteer bestand: **04050297-04 C0306-MC5M1U-L6_firmware.bin**

Step 5

Ananda Diagnosis Service Tools

Tools(T) View(V) Help(H)

F2 Controller Update F7 Display Update F5 ADST System Diagnosis ADST Box Update Battery N6 ADST System Configuration

ANANDA 10:31:15:17:41

Controller Update

HW Version:

FW Mass:

Firmware Version:

Parameter Version:

Bootloader:

SN: Write

Software Upgrade

Parameter: ☐ ...

Firmware: ☐ Ananda\ananda\Configurations\Firmware\my.bin ...

Com: COM4 Close

① The instrument wire will be separated from the motor(or the controller),
② then the wire of the ADST will be connected with the motor (or the controller).

Mid Motor
OR
Controller

Communication Status

Cannot open serial port.

Druk op software upgrade.